

LS126A UV Light Meter

User Manual V1


LS126A UV light meter is mainly for intensity and energy measurement of UVA light source. The meter features in an ultra-small probe design, suitable for measuring the UV intensity and energy of some small space where conventional probe is difficult to put in.

I. Technical Parameters

1. Spectral response: 340nm-420nm, calibrated with 395nm UV LED light source
2. Measuring range: 0 - 20000mW/cm²
3. Resolution: 1mW/cm²
4. Energy measuring range: 0-9999999mJ/cm²
5. Record time: 0-99999s
6. Resolution: $\pm 10\%$
7. Sampling speed: 2000times/second
8. Optional unit: mW/cm² (default), W/cm², W/m²
9. Test Hole Diameter: $\varnothing = 3\text{mm}$
10. Probe size: 28mm long \times 7.2mm wide \times 6.5mm thickness
11. Instrument size: 148mm long \times 76mm wide \times 26mm high
12. Probe wire length: 0.8m
13. Instrument weight: about 232 grams
14. Display: 240*160 dot matrix LCD
15. Battery: 4 AAA alkaline dry batteries



II. Spectral response curve

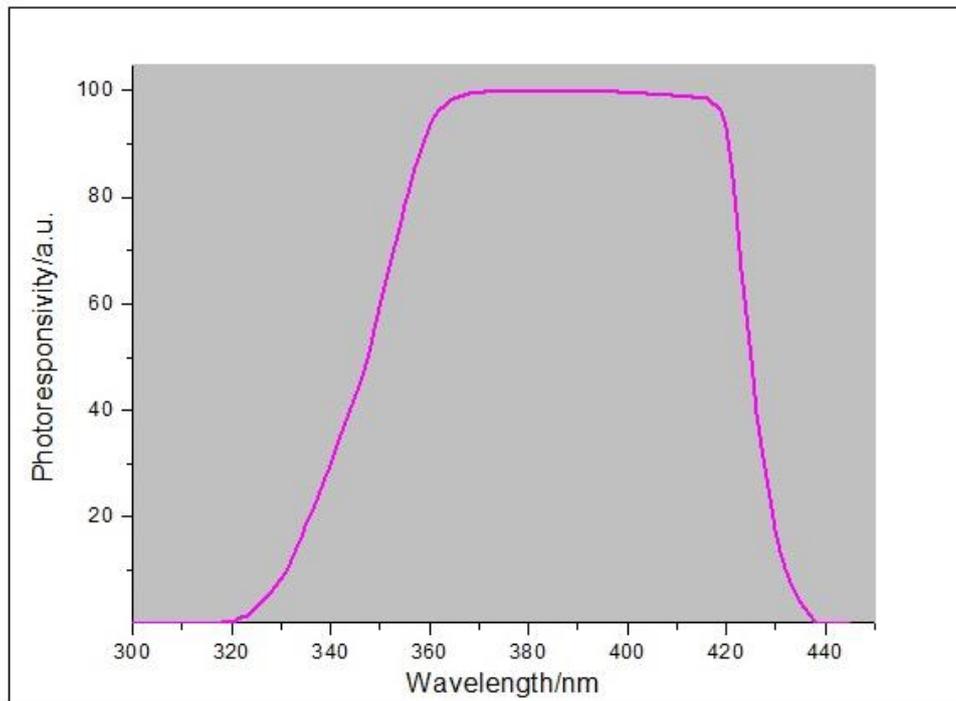


III. Product features

1. The probe is designed with ultra-small size; the narrowest width that can be put in is 7.2mm.
2. With a high-speed sampling speed of 2000 times per second, accurately calculate the UV energy value.
3. Have statistical function, directly display real-time value, maximum value, minimum value, average value and measurement duration.
4. Suitable for measuring the intensity and energy of UV LED light source for UV curing machine.

IV. Operations


1. Power on/off

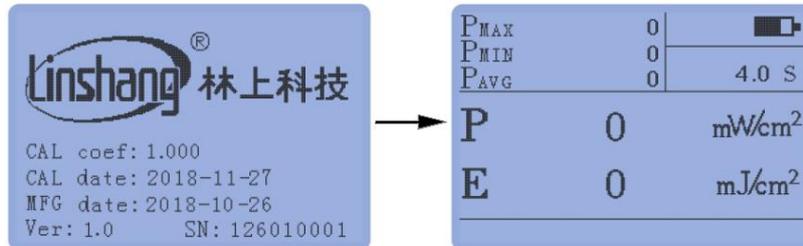- **Power on:** Press “


- **Power off:** Long press the “

2. Parameter setting mode

In the off state, long press the “

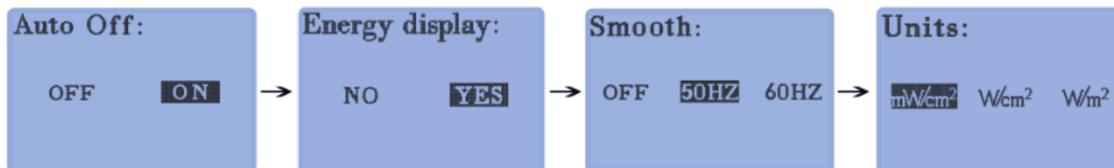In the setting mode, “


A: Select whether to automatically power off (Auto Off: ON/OFF)

Short press the “

Selecting ON indicates that the instrument automatically powers off in 10mins after no operation.

Selecting OFF indicates that the user has to manually turn the instrument off, and the instrument will not automatically power off.

Short press “” button to complete the setting and enter the next Set option.

B: Whether to display the energy value (Energy display: ON/OFF)

Short press the “” or “” button to select ON/OFF

Short press “” button to complete the setting and enter the next Set option.

C: Smooth (OFF/50Hz/60Hz)

If UV light source powered by AC power supply, the AC frequency affects the power measurement, so that the smoothing process becomes necessary for those probes with high sampling speed (2000times/second), enter the smooth setting mode, short press the “” or “” button to select.

OFF/50Hz/60Hz

OFF: Select this option, if UV light is DC powered and does not need smoothing

50Hz: Select this option for 50Hz AC

60Hz: Select this option for 60Hz AC

Short press “” button to complete the setting and enter the next Set option.


D: Select the unit (Units: $\mu\text{W}/\text{cm}^2$, mW/cm^2 , W/cm^2 , W/m^2)

Short press the “” or “” button to select the unit required.

Short press “” button to complete the setting and enter the measurement mode.

3. Measurement mode

- In the measurement mode. The system displays the real-time value, maximum value, minimum value, average value, measurement duration, energy value (Energy display =Yes)

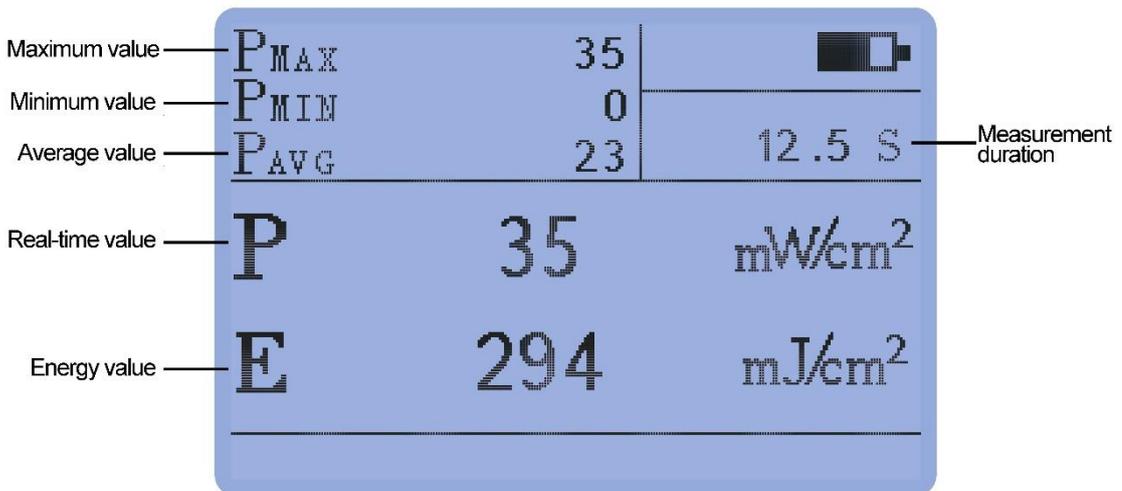

- In the measurement mode, if the backlight is off, press the “” button to light the

backlight; if the backlight is already lit, short press the “” button, and the “HOLD” icon will be displayed in the lower left corner of the interface. All data will be kept on the LCD, and the current data will be saved to the history record.

- In the “HOLD” state, if the backlight is off, press the “” button to light the backlight; if the backlight is already lit, short press the “” button to cancel the HOLD function and start a new measurement.
- In the measurement mode, if the backlight is off, short press the “” button to light the backlight; if the backlight is already lit, press the “” button to clear up the current data and start a new measurement.
- In the measurement mode, short press “” or “” to enter the record data query mode.

4. Record data query mode

- No.1 is the latest record data (up to 9 records are stored in the instrument, and the oldest record will be deleted automatically when exceed 9 records).
- Short press “” or “” to scroll up or down a record.
- Long press the “” button 3 second to clear all records.
- Short press the “” button to enter the measurement mode.

V. Precautions

1. When not in use, please long press the “” button to power off the instrument.
2. Avoid contacting with corrosive materials and keep away from high humidity.
3. After shutdown, store it in a special packing box and keep it in a safe place. Protect the photosensitive part of the probe from polluting.
4. The recommended period of calibration is one year.
5. Because the UV probe is sensitive to humidity, the environment in which it is stored is important. When not in use for a long time, be sure to store the instrument in a low humidity environment.
6. When the instrument displays low battery, replace the battery.

VI. Packing list

No.	Description	Quantity	Unit
1	LS126A UV light meter	1	pcs
2	AAA battery	4	pcs
3	User manual	1	pcs



4	Certificate/Warranty card	1	pcs
5	Plastic box	1	pcs

VII. Service

1. The instrument has one-year warranty. If the instrument works abnormally, please send the whole instrument to our company for maintenance
2. Provide users with spare parts and lifelong maintenance services
3. Provide the users with the instrument calibration service
4. Free technical support for long term

Manufacturer: Shenzhen Linshang Technology Co., Ltd.

Website: www.linshangtech.com

Service hotline: 086-755-86263411

Email: sales21@linshangtech.com